
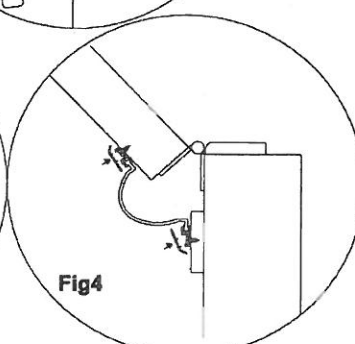
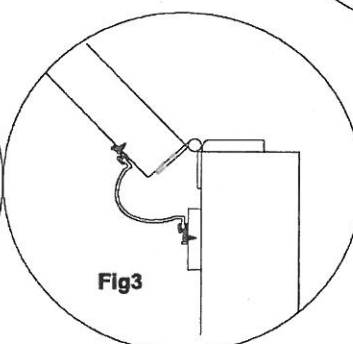
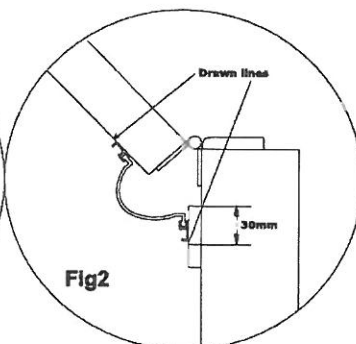
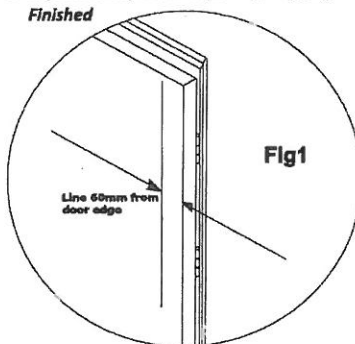


## Finger Protection Device (front) Fitting Instructions

- 1 Check the Finger Protection Device for size
- 2 If you need to cut to length leave 10mm clearance top and bottom. Use hacksaw to cut rigid profiles and sharp scissors or knife to cut flexible shield
- 3 Ensure that the surfaces that are to be adhered to are free from dust or grease
- 4 Draw a line vertically down the door 60mm from the hinge edge (see fig 1)
- 5 Remove tape backing from door side rigid profile and stick in position with outer edge on drawn line (see fig 2)
- 6 Remove tape backing from other rigid profile and stick in position on door jamb (see fig 2)
- 7 Using screws provided fix both rigid sides of Finger Protection Device in positioning with a screw every 150mm and with one no more than 25mm away from top and bottom (see fig 3)
- 8 Hammer in the panel pin provided as shown in fig 5 at the top of the profile attached to the frame
- 9 Clip screw cap cover in place (see fig 4)

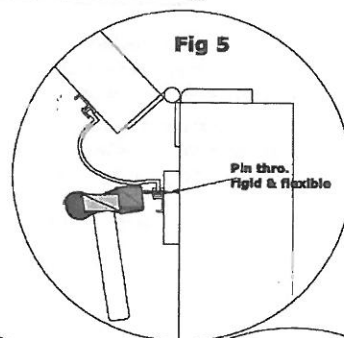

### Maintenance

The only maintenance that may be required is an occasional wipe down with a damp cloth

**IMPORTANT NOTICE :** Please note that double sided tape is only applied as a fitting aid this product should be fixed using screws provided before use

**IMPORTANT NOTICE :** PRODUCT MUST NOT BE COLD WHEN FITTED AND SHOULD BE STORED AT NORMAL ROOM TEMPERATURE FOR 6 HRS PRIOR TO FITTING

**Please be advised that neither the seller or manufacturer can be responsible for any damage caused other than fair wear and tear**